


## Crestlite® Hinge Door Installation

# Hinge Door - Installation

# Hinge Door - Installation

Building In Detail | **Blockwork - No Rebate with Sub Sill**

Building In Detail | **Blockwork - No Rebate with no Sub Sill**

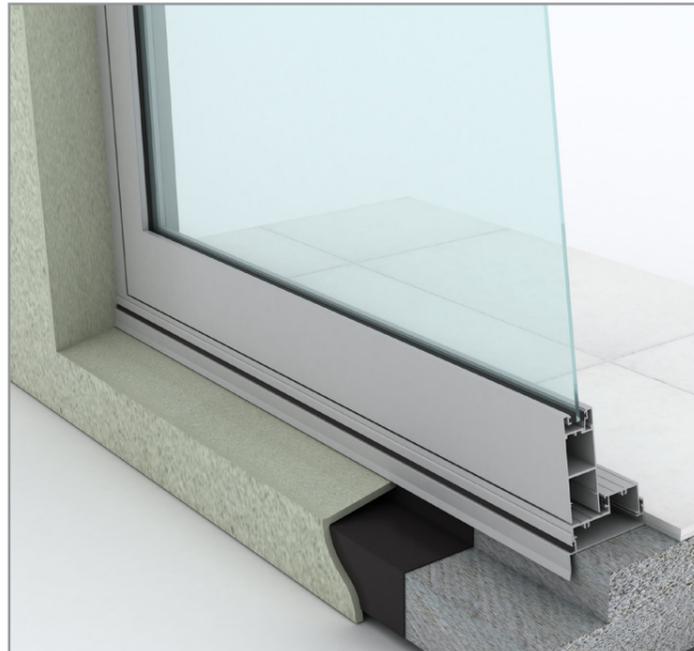


## INSTALLING FRAME CORRECTLY

- Measure the frame opening to ensure that there is sufficient room for the product and additional packing.

**Blockwork Opening:**

Height = Frame Height + 50mm  
Width = Frame Size + 20mm

- Header beam should be at least 12mm clear of window frame.
- Fit subframe to opening and seal fixings.
- Fit window to subframe (screw or pop-rivet).
- Do not permit weight of eaves or arch bars to bear on any window or door frame. **(Windows and doors are not load bearing.)**
- To ensure the satisfactory long term performance of doors, sill must be fully supported.
- Ensure outside finish does not block sill drainage holes.

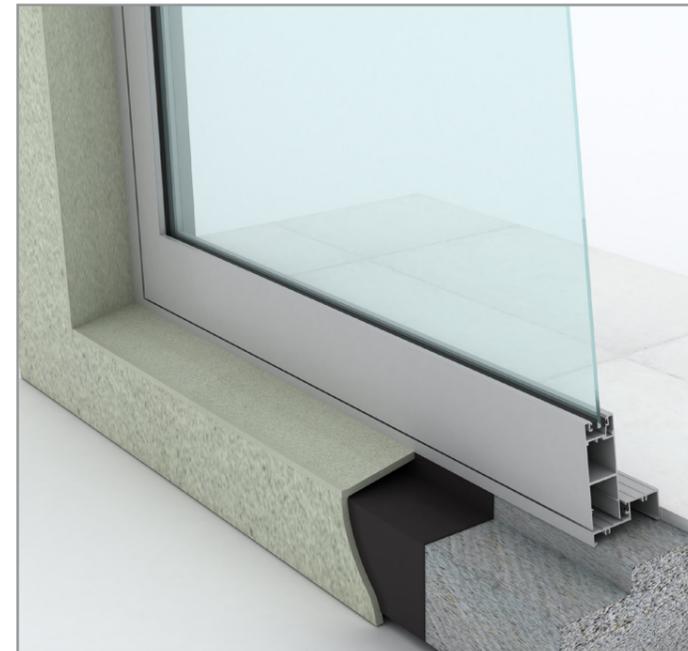





## INSTALLING FRAME CORRECTLY

- Measure the frame opening to ensure that there is sufficient room for the product and additional packing.

**Blockwork Opening:**

Height = Frame Height + 50mm  
Width = Frame Size + 20mm

- Header beam should be at least 12mm clear of window frame.
- Fit subframe to opening and seal fixings.
- Fit window to subframe (screw or pop-rivet).
- Do not permit weight of eaves or arch bars to bear on any window or door frame. **(Windows and doors are not load bearing.)**
- To ensure the satisfactory long term performance of doors, sill must be fully supported.
- Ensure outside finish does not block sill drainage holes.

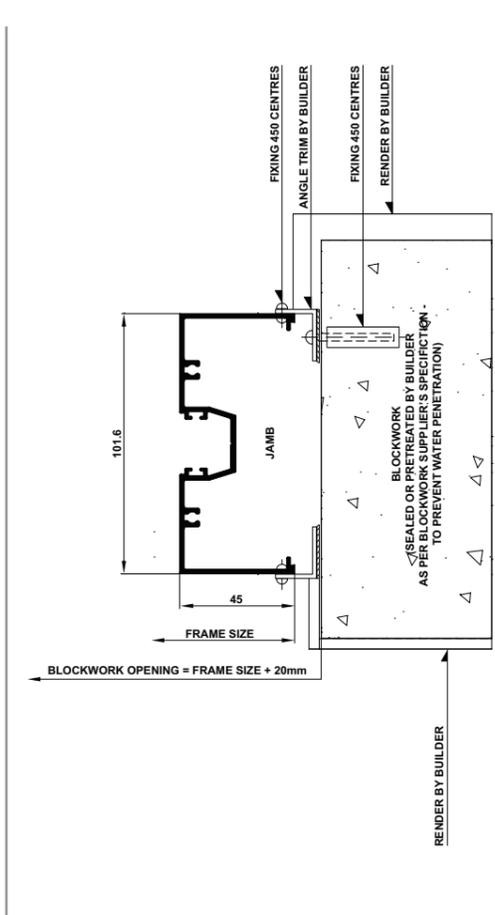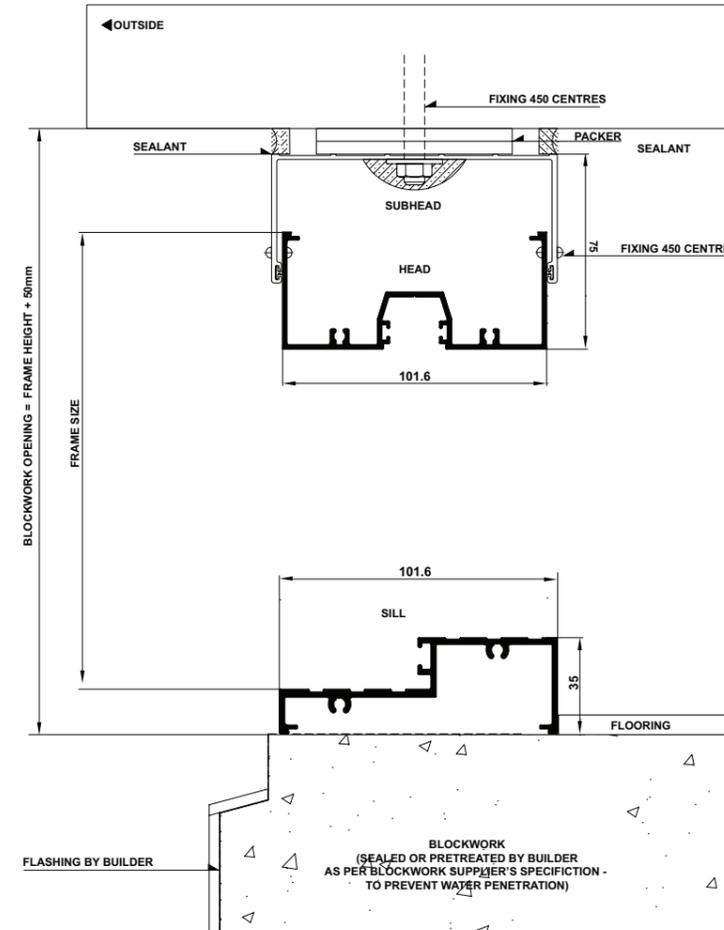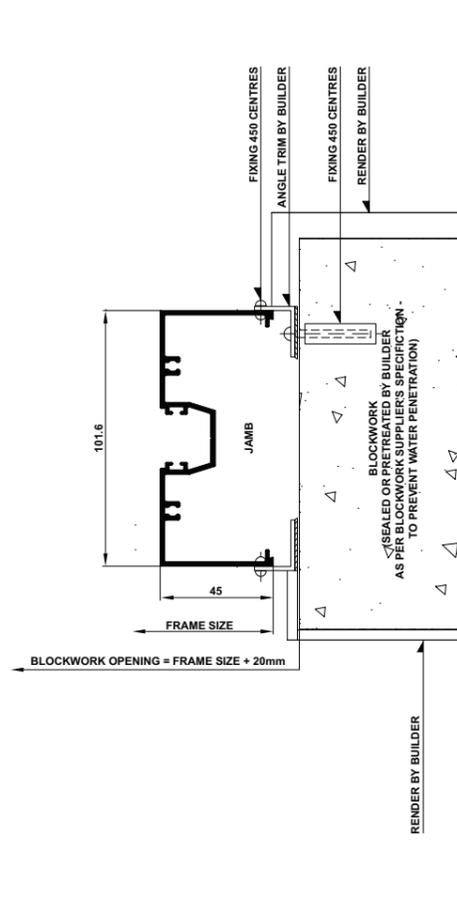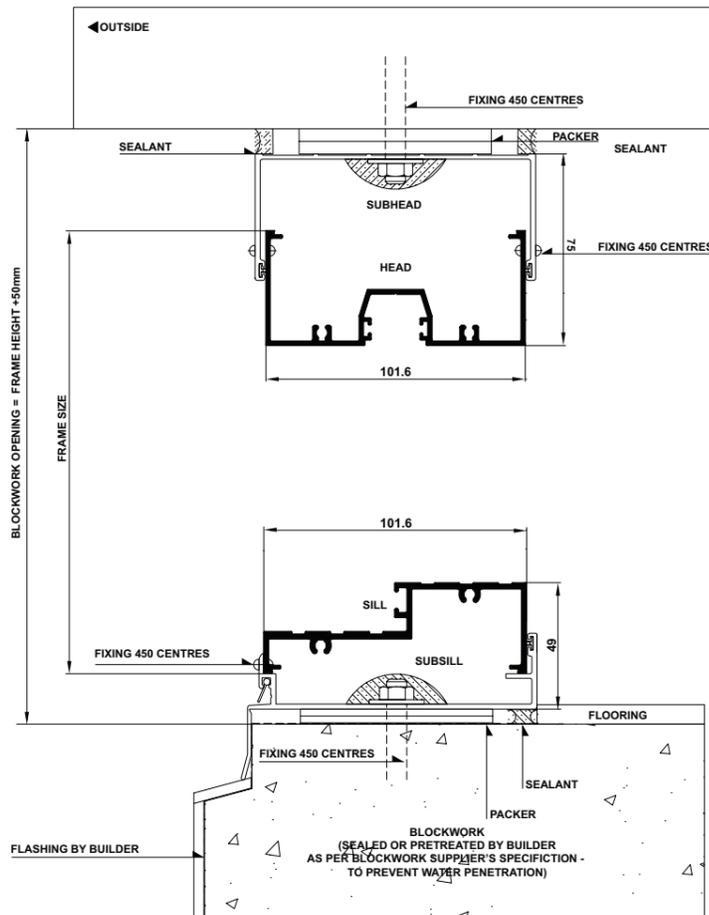

Please note that drawings displayed are not to scale


Please note that drawings displayed are not to scale

# Hinge Door - Installation

# Hinge Door - Installation

Building In Detail | **Blockwork - Rebate with Sub Sill**

Building In Detail | **Blockwork - Rebate with no Sub Sill**

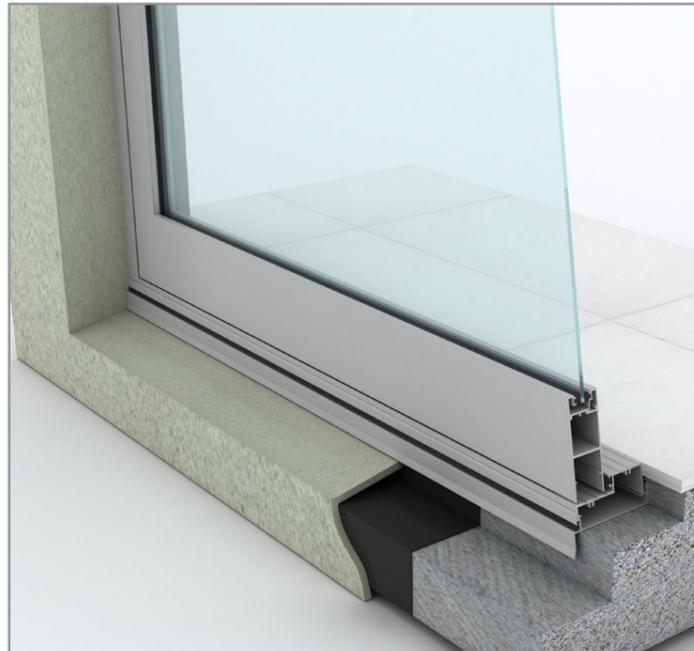


## INSTALLING FRAME CORRECTLY

- Measure the frame opening to ensure that there is sufficient room for the product and additional packing.

**Blockwork Opening:**  
Height = Frame Height + 50mm  
Width = Frame Size + 20mm

- Header beam should be at least 12mm clear of window frame.
- Fit subframe to opening and seal fixings.
- Fit window to subframe (screw or pop-rivet).
- Do not permit weight of eaves or arch bars to bear on any window or door frame. **(Windows and doors are not load bearing.)**
- To ensure the satisfactory long term performance of doors, sill must be fully supported.
- Ensure outside finish does not block sill drainage holes.




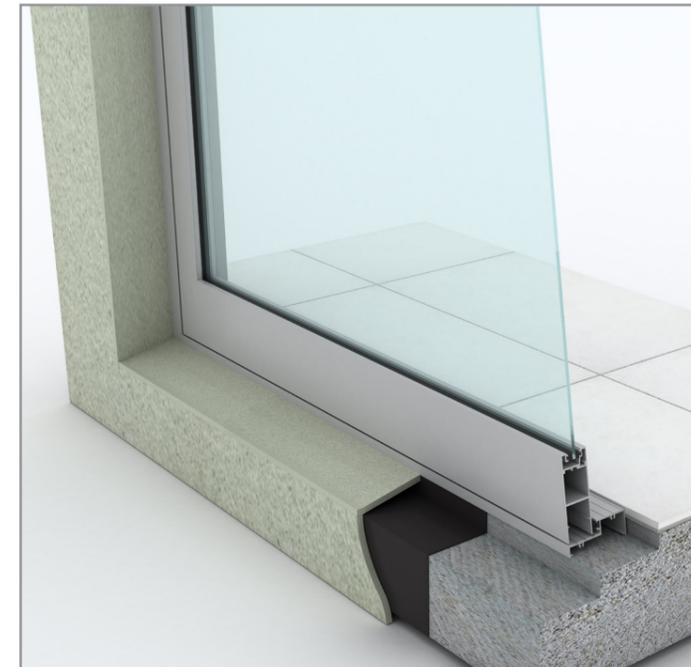


## INSTALLING FRAME CORRECTLY

- Measure the frame opening to ensure that there is sufficient room for the product and additional packing.

**Blockwork Opening:**  
Height = Frame Height + 50mm  
Width = Frame Size + 20mm

- Header beam should be at least 12mm clear of window frame.
- Fit subframe to opening and seal fixings.
- Fit window to subframe (screw or pop-rivet).
- Do not permit weight of eaves or arch bars to bear on any window or door frame. **(Windows and doors are not load bearing.)**
- To ensure the satisfactory long term performance of doors, sill must be fully supported.
- Ensure outside finish does not block sill drainage holes.

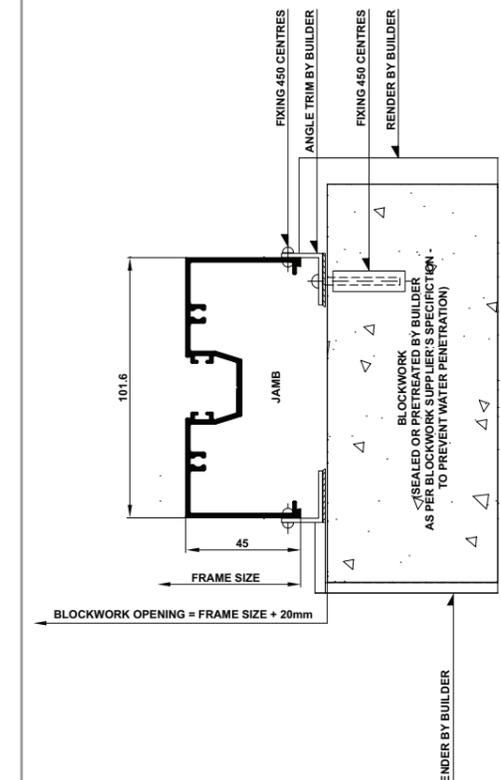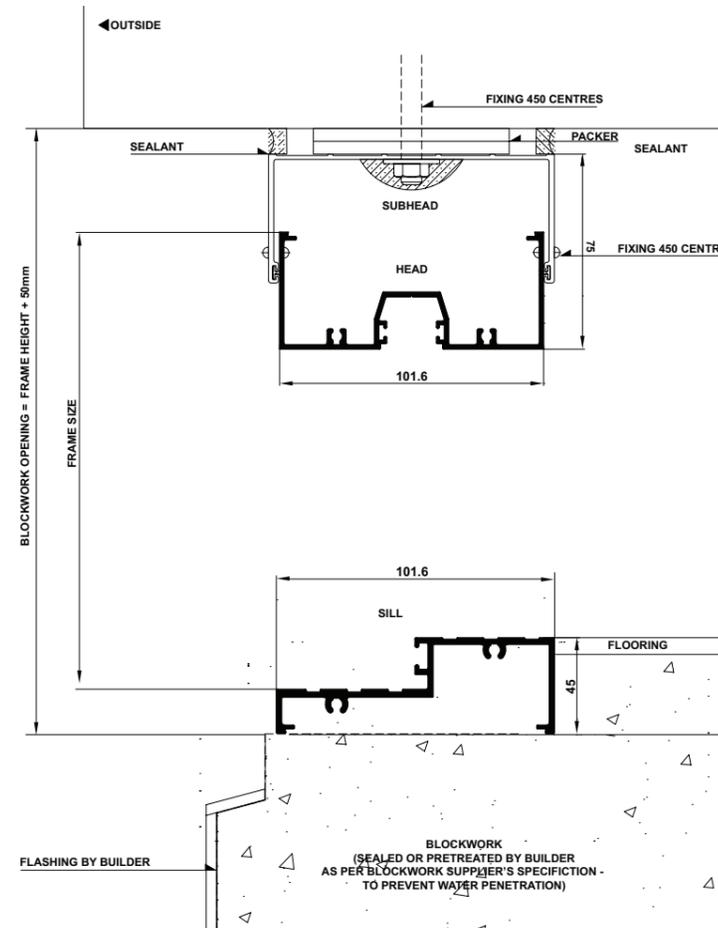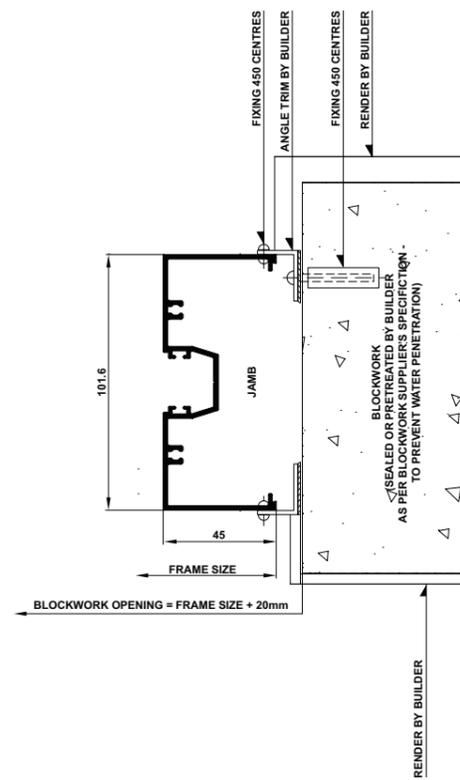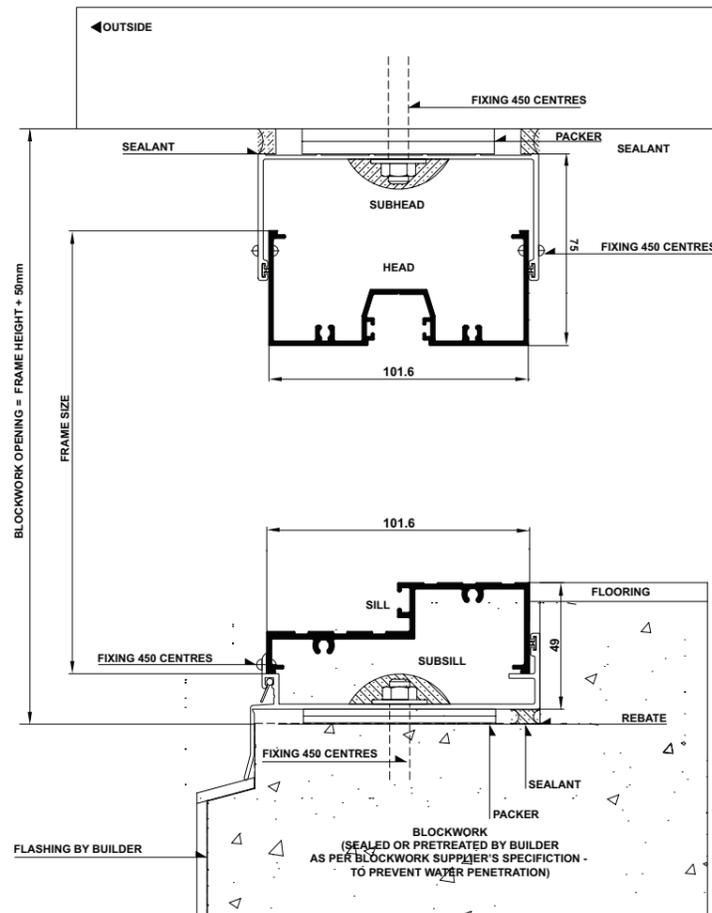

Please note that drawings displayed are not to scale

Please note that drawings displayed are not to scale








## Crestlite® Hinge Door Cross Sectional Views
 
## Hinge Door - Cross Sectional Views

## Hinge Door - Cross Sectional Views

Rebated Threshold

Disabled Ramp Threshold

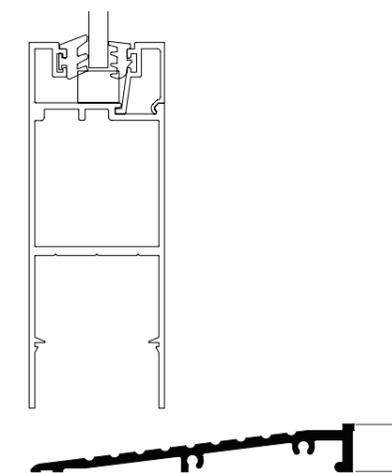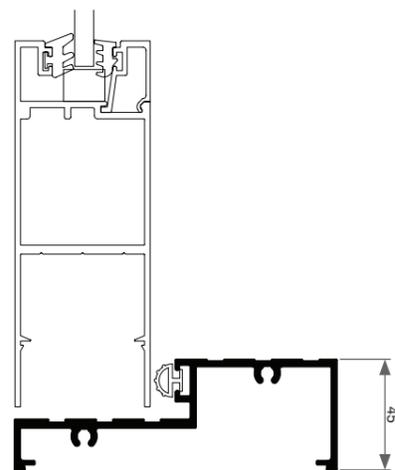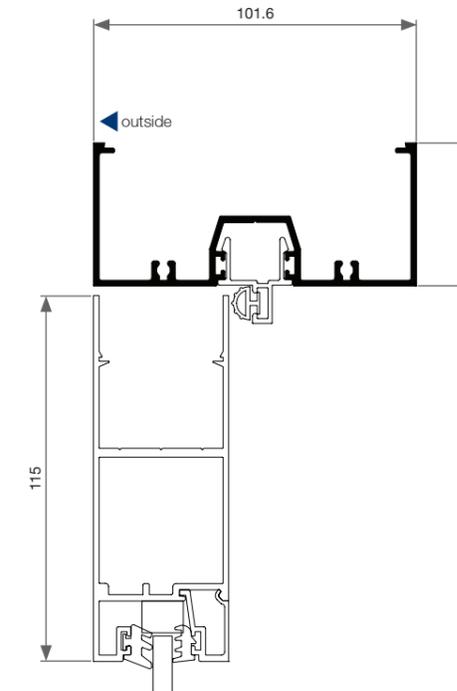
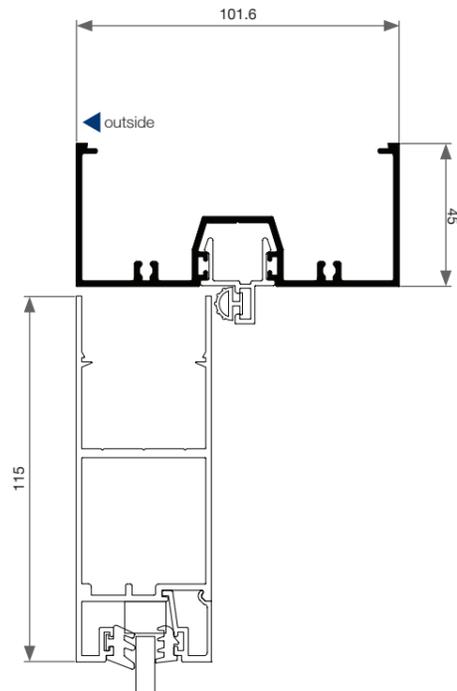


# Hinge Door - Cross Sectional Views

# Hinge Door - Cross Sectional Views

Single - Open In | No Sill

Pair - Open In

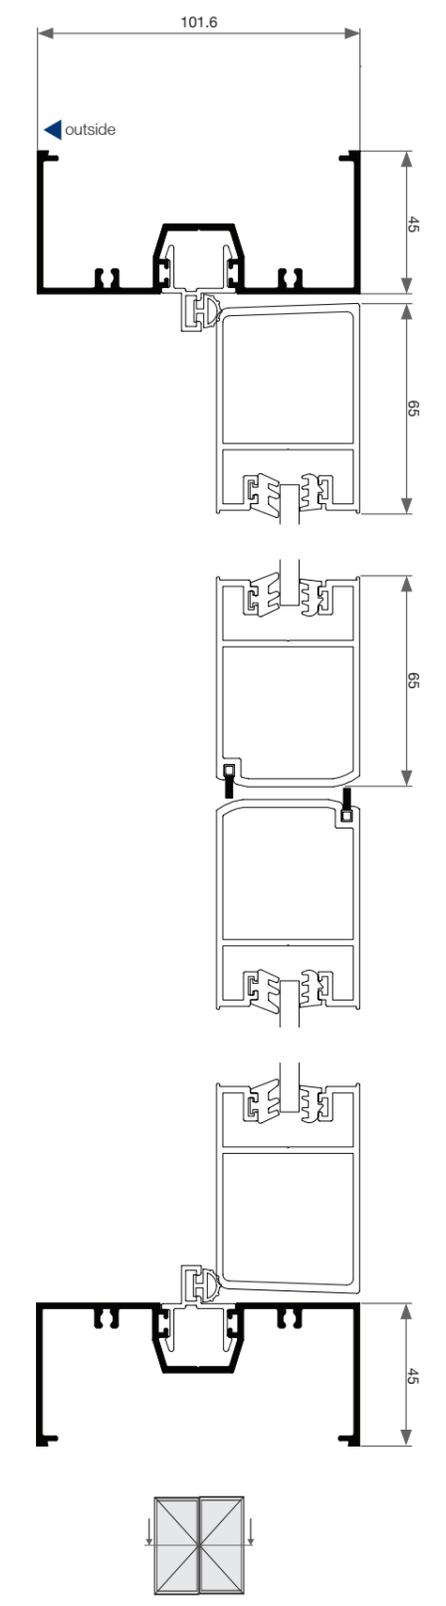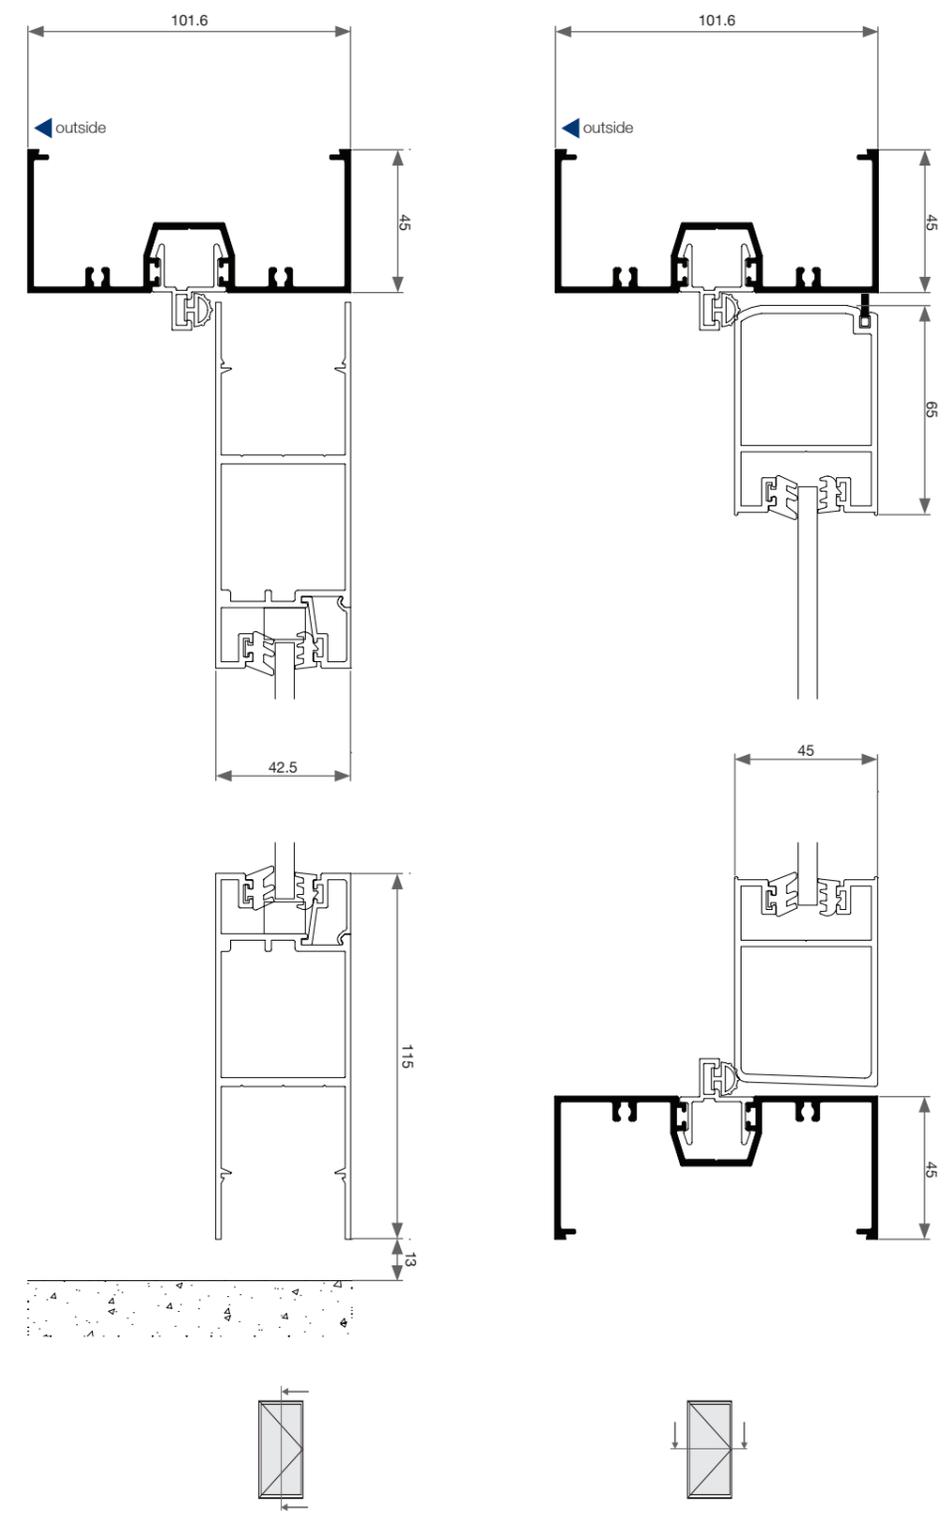

## Hinge Door - Cross Sectional Views

## Hinge Door - Cross Sectional Views

Single - Open Out | No Sill

Pair - Open Out

