




Instructions

Door Lock Installation

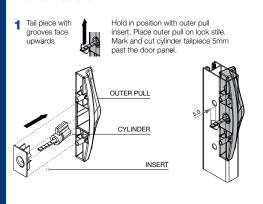

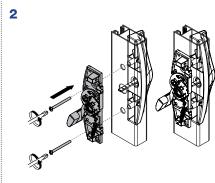

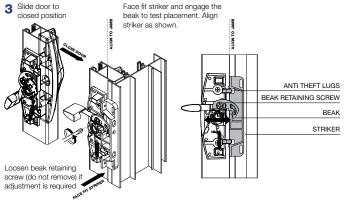






Ensure anti theft lugs engage when strike is in the locked position




Once the beak is in the correct position, retighten beak retaining screw, do not overtighten

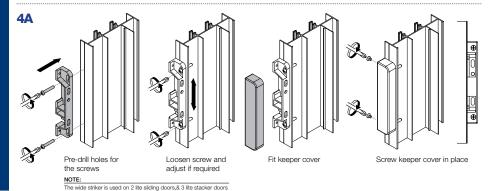

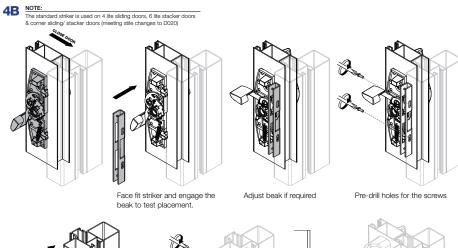

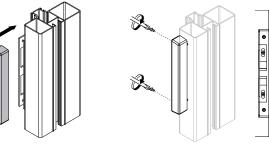


Screw keeper cover in place

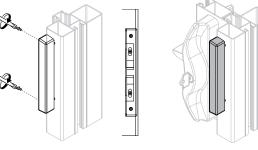




Fit keeper cover

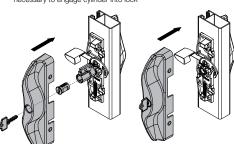

Secure cover with cover fixing screws.

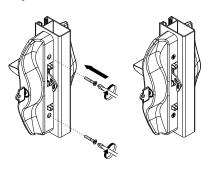

Please note that drawings are not to scale

Instructions | Door Lock Installation | Mk-1 | 25 Feb 2010