








On Site Fitting instruction for 3 panel Sliding Door FFX

Kit contains

Items	Description	Quantity
	Frame Factory fitted sill tread and fix panel adaptor	1
	Panels A-Fixed panel B-Fixed panel C-Sliding panel	1 1 1
	Top fix block & 3 Lite Fixed Block	4
	63X8# Pan head Stainless Steel	2
	12X8# Pan head Stainless Steel	8
	20X6# Csk head Stainless Steel	2


Installations

- 1- Make sure the frame installed onsite is square and level.
- 2- Insert Top fix blocks into top of the Interlock on Fix panel (A)

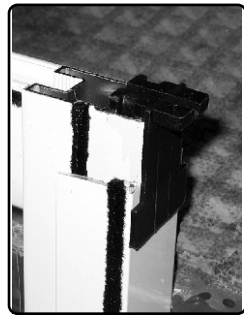


- 3- Place the Fix panel(A) onto the frame.
- Slip the top panel into the middle channel of the Head frame.

- Position the bottom panel inside the fix channel on the sill (Bottom frame).
Check the bottom interlock to make sure the fix panel fitting in.

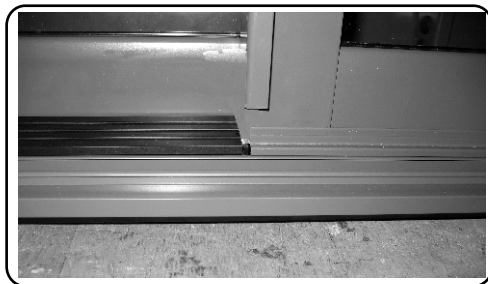

- 4-On top of the interlock, lift the Top fix block to touch the Head frame.
Use screw (12X8) to secure it to frame.

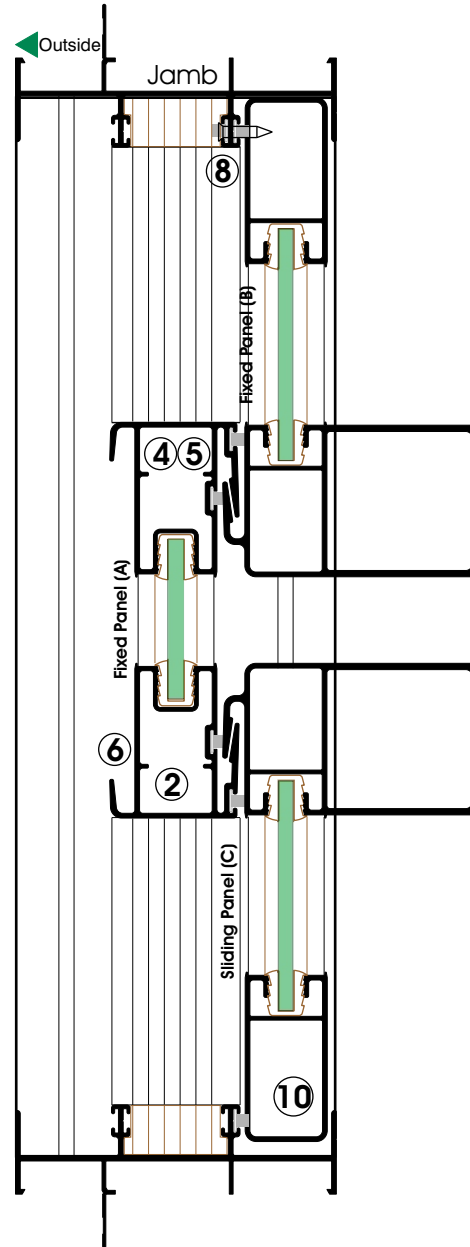


- 5-On top of the interlock, use screw (63X8) to secure Top fix block to the panel.



- 6-On bottom of the interlock, use screws (12X8) to secure bottom interlock to the sill both inside & outside.



- 7- Place the Fix panel (B) onto the frame.
-Place 3 Lite fixed blocks onto the sill.
Locate Fixed panel (B) sits on it.

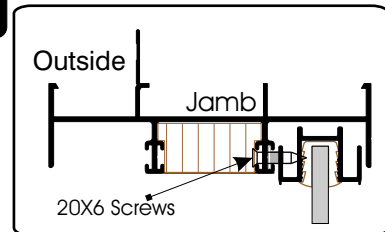

- 8 - On the outside, place screws (20x6) along the Jamb, approx. 500mm from top and bottom, between the mohair to fix panel to the Jamb.

- 9- Place the sliding panel (C) into frame on the inside.
- If required,
Adjust the rollers from either end of sliding panel with phillips screwdriver.



- 10- Fitting the door lock handle as in Lock fitting instruction

