









On Site Fitting instruction for 4 panel Sliding Door

Kit contains

Items	Description	Quantity
	Frame Factory fitted sill tread and fix panel adaptor	1
	Panels A-Fixed panel	2
	B-Sliding panel	2
	Top fix block	2
	63X8# Pan head Stainless Steel	2
	12X8# Pan head Stainless Steel	8
	20X6# Csk head Stainless Steel	6



Installations

- 1- Make sure the frame installed onsite is square and level.
- 2- Insert Top fix block into top of the Interlock on Fix panel (A)

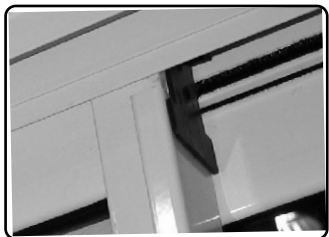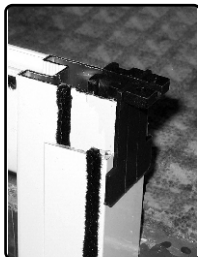


- 3- Place the Fix panel(A) onto the frame.
 - Slip the top panel into the middle channel of the Head frame.

- Position the bottom panel inside the fix channel on the sill (Bottom frame).
- Check the bottom interlock to make sure the fix panel fitting in.

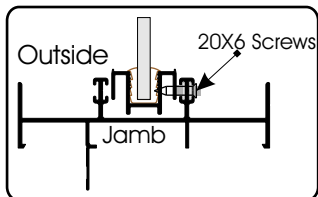
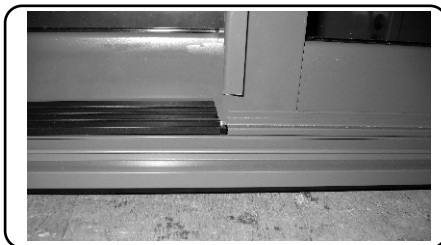


- 4 - On the inside, place screws (20x6) along the Jamb, approx. 500mm from top and bottom, between the mohair to fix panel to the Jamb .

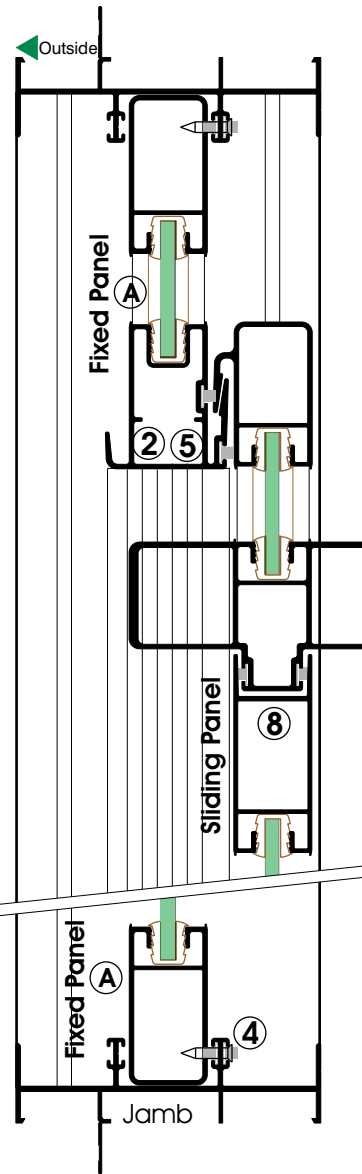


- 5-On top of the interlock, lift the Top fix block to touch the Head frame. Use screw (12X8) to secure it to frame.

- On top of the interlock, use screw (63X8) to secure Top fix block to the panel.

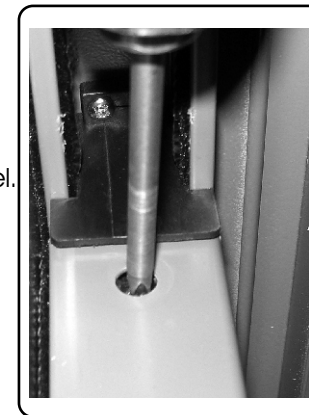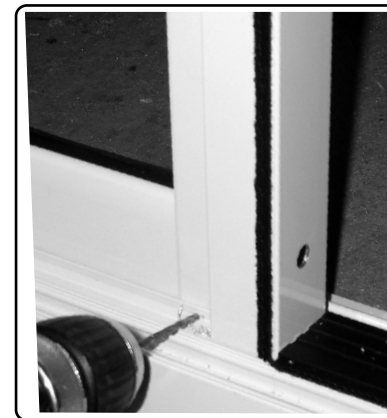

- On bottom of the interlock, use screws (12X8) to secure bottom interlock to the sill both inside & outside.

- 6- Perform same as in previous step to other fixed panel.

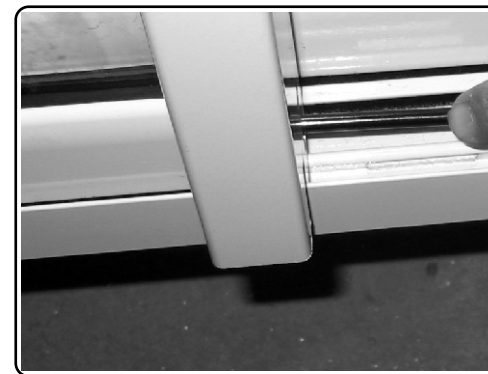

- 7- Place the sliding panel into frame on the inside.
 - If required, Adjust the rollers from either end of sliding panel with phillips screwdriver.

- 8- Fitting the door lock handle as in Lock fitting instruction